

DANCOVER[®]



Manual
for
Arc Awning
for Bell Tent TentZing



1. First, insert the aluminium rod into the sleeve of the front door.
2. Connect the corns at the top of the back door to the thimble on the tent door.
Both sides of the back door need to peg to the ground, along the edge of the tent.
3. Adjust the width of the front door webbing to 3.75 m (Best Proch Width for bell tent).
Then put the rope through the corns reserved at the front door sleeve, pull the proch and fix the rope with pegs.

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

