

**DANCOVER<sup>®</sup>**



Manual  
Heater  
NS-600H-R

NS-600H-R



**Attention:**

**In order to use this appliance safely please read the following instructions completely before using it. This guide is part of the product. Keep it well for future reference and hand it out when you sell or lend this product or when you give it to other people for other reasons.**

### **Instruction for use :**

1. Read all of these instructions carefully before operating the unit.
2. The heater is hot when in use, do not touch the hot surface of the heater and keep all combustible materials at least 3 feet from the heater.
3. Extreme caution is necessary when any heater is being used near children.
4. Do not leave the heater unattended when in operation.
5. Always unplug the heater when it is not in use.
6. Do not operate the heater if the plug or the power cord is damaged in any way or the unit has malfunctioned.
7. You can use this heater indoors and outdoors.
8. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
9. When disconnecting the heater, always make sure that the controls are in the OFF position and never pull the plug by the cord.
10. Do not allow foreign objects to enter the heater as this may cause an electric shock or a fire hazard.
11. To prevent the possible risk of fire, please ensure that the heater is not covered by any objects.
12. Do not use in areas where there is petrol, paint or any other flammable liquid stored.
13. Never use the heater for anything other than its intended purpose.
14. The heater must not be directly located below a socket outlet. Always ensure that the heater has cooled fully before storing.
  
15. **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
  
16. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
  
17. **Children of less than 3 years should be kept away unless continuously supervised**

**Children aged from 3 years and less than 8 years only switch on/off the appliance provided that it has been placed or installed in its intended normal**

operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in , regulate and clean the appliance or perform user maintenance.

**CAUTION-** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

**17. The heater must not be located immediately below a socket-outlet**

**18. Do not use the heater with a programmer, time, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.**

**19. This heater is not equipped with a device to control the room the temperature. Don't use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.**

**WARNING:** In order to avoid overheating, do not cover the heater

### **Operation :**



1. Place the heater on a firm level surface free from obstructions and at least 3 feet away from any wall or combustible materials.
2. With the selector knob in the OFF position, plug the heater into the main supply.
3. Turn the control knob to either (Low) for 300 Watt or (High) for 600 Watt.
4. Turn the control knob fully to the (Osc) position to activate the oscillation feature.
5. Turn the selector knob to the OFF position and unplug the unit when you have finished using it.

### **Other Features:**

The heater is equipped with a safety tilt switch which automatically shuts off the heater element if the heater is not in the upright position, the heater will resume back to normal when the heater is returned to the upright position.

### **If your heater fails to operate:**

1. Be sure the unit is plugged into the power supply and that the electrical outlet is in working order:
2. Check for obstructions.
3. If you find any obstruction, turn the heater OFF, unplug the unit from the power supply and wait for it to cool down, carefully remove the obstruction, plug the heater into the power supply and restart the unit as described in the Operation guide.
4. If the defect persists, remove the plug from the power point and consult an authorized electrical company.

### **Cleaning and Storage:**

We recommend that the heater is cleaned at least once a month and before storage. Turn the heater OFF, unplug the unit and allow it cool down. Use a dry cloth to clean the external surface of the heater.

**DO NOT USE, WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.**



This Symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority.

## Contact information

### Head office:

Dancover A/S  
Nordre Strandvej 119 G  
3150 Hellebæk  
Denmark

For more information  
please visit:  
[www.dancovershop.com](http://www.dancovershop.com)

## National contact

Denmark: 70 26 76 20  
[denmark@dancover.com](mailto:denmark@dancover.com)

UK: 020 8099 7570  
[uk@dancover.com](mailto:uk@dancover.com)

Germany: 041 0266 7040  
[germany@dancover.com](mailto:germany@dancover.com)

France: 0975 181 800  
[france@dancover.com](mailto:france@dancover.com)

Sweden: 040 233 262  
[sverige@dancover.com](mailto:sverige@dancover.com)

Finland: 0 931 581 720  
[suomi@dancover.com](mailto:suomi@dancover.com)

Poland: 22 300 8602  
[polska@dancover.com](mailto:polska@dancover.com)

Luxembourg: +49 041 0266 7040  
[luxembourg@dancover.com](mailto:luxembourg@dancover.com)

Portugal: 308 800 899  
[portugal@dancover.com](mailto:portugal@dancover.com)

Spain: 911 436 828  
[espana@dancover.com](mailto:espana@dancover.com)

Italy: 02 479 21 198  
[italia@dancover.com](mailto:italia@dancover.com)

Switzerland: 0840 000125  
[schweiz@dancover.com](mailto:schweiz@dancover.com)

Austria: 0662 626935  
[austria@dancover.com](mailto:austria@dancover.com)

Norway: 231 00 690  
[norge@dancover.com](mailto:norge@dancover.com)

Nederland: 0 858 880 524  
[nederland@dancover.com](mailto:nederland@dancover.com)

Ireland: 0 151 33 003  
[ireland@dancover.com](mailto:ireland@dancover.com)

Belgium: 0 28 08 08 09  
[belgique@dancover.com](mailto:belgique@dancover.com)